
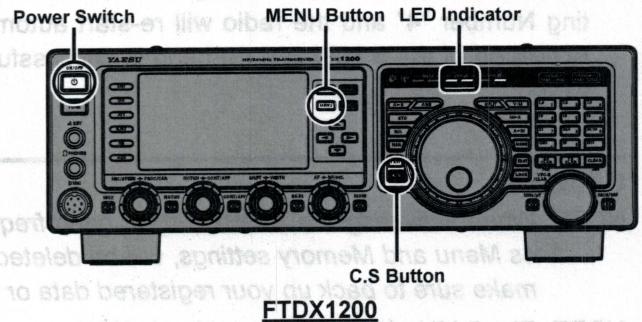
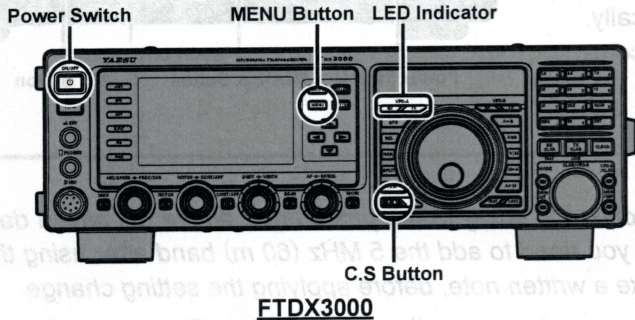


## Information for Customers Operating Transceivers in the UK

Thank you very much for purchasing the YAESU HF transceiver. The below listed transceivers are designed to transmit in the Amateur Band frequencies: 1.8 MHz – 52 MHz (FT-991/ FT-991A: 1.8 MHz - 440 MHz). As delivered from the factory, the 5 MHz (60m) band is not activated. If operation on the 5 MHz (60 m) band is desired, follow the procedure below before using the transceiver for the first time.


### FTDX5000 / FTDX3000 / FTDX1200

1. Turn the transceiver OFF.
2. Press and hold in the [MENU] and [C.S] buttons while turning the transceiver ON.  
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press the [MENU] button, and then the Green LED Indicator will blink with intervals of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MENU] button, and the radio will re-start automatically. Activation of the 5 MHz (60 m) band is successfully completed.

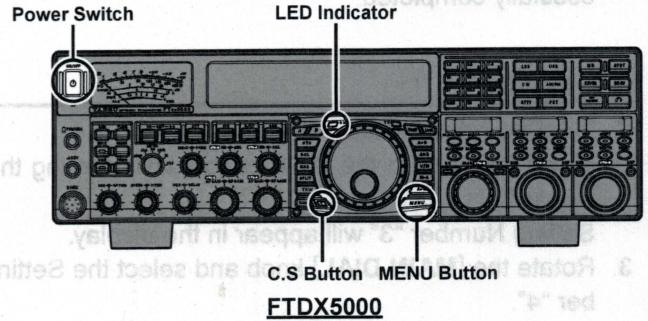

### FT-991A / FT-991

1. Turn the transceiver OFF.
2. Press and hold in the [F] and [MODE] buttons while turning the transceiver ON.  
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press the [MODE] button, and then the Green LED Indicator will blink with intervals of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MODE] button, and the radio will re-start automatically. Activation of the 5 MHz (60 m) band is successfully completed.

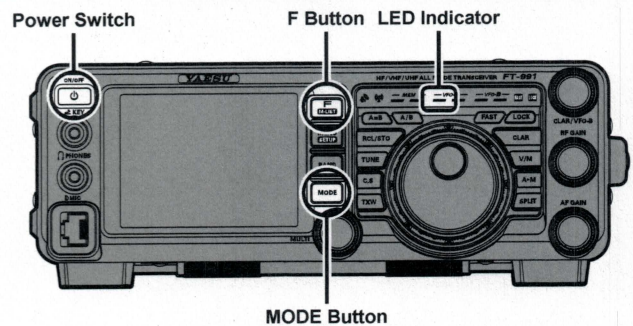

\* The FT-991A/FT-991 is an HF and VHF/UHF transceiver. In the VHF/UHF bands, the transceiver is configured at the factory with the ARS (Automatic Repeater Shift) Frequency Range and the Repeater shifts as shown below in "ARS Configuration B2". By activating the 5 MHz (60 m) operation above, the ARS Frequency Range and the Repeater Shifts will be changed to "ARS Configuration C2".

ARS Configuration "B2" Factory Default Setting	ARS Configuration "C2" Selectable Setting
<b>ARS Frequency Range</b> 438.20 MHz - 439.45 MHz (- shift)	<b>ARS Frequency Range</b> 433.00 MHz - 433.40 MHz (+ shift) 434.60 MHz - 435.00 MHz (- shift)
<b>Repeater Shifts</b> 7.6 MHz	<b>Repeater Shifts</b> 1.6 MHz

NOTE: When enabling the FT-991A / FT-991 transceiver to transmit in the 5MHz (60m) band, "ARS Configuration B2" is not available.