

Information for Customers Operating Transceivers in the UK

Thank you very much for purchasing the YAESU FT-65E.

The FT-65E transceiver is configured at the factory with the ARS (Automatic Repeater Shift) Frequency Range, and the Repeater Shifts, as shown in the below chart “ARS Configuration B2”.

ARS Configuration “B2” Factory Default Setting	ARS Configuration “C2” Selectable Setting
ARS Frequency Range 438.20 MHz - 439.45 MHz (- shift)	ARS Frequency Range 433.00 MHz - 433.40 MHz (+ shift) 434.60 MHz - 435.00 MHz (- shift)
Repeater Shifts 7.6 MHz	Repeater Shifts 1.6 MHz

For operation in a location where the Frequency Range and Repeater Shifts in use are as shown in the chart “ARS Configuration C2”; follow the respective procedure to change the Automatic Repeater Shift configuration, before using the transceiver for the first time.

1. Turn the transceiver OFF.
2. Press and hold the **MONI/T.CALL** key and the **PTT** switch simultaneously, while turning the transceiver ON.
3. When the LCD backlight comes on, release the **MONI/T.CALL** key and **PTT** switch.
4. Press **[0]** \Rightarrow **[2]** \Rightarrow **[2]** keys.
5. The radio will re-start automatically. Setting of the ARS feature to “Configuration C2” is successfully completed.



Caution:

NOTE: By changing the ARS designated bands and repeater shifts according to the procedures above, all saved data, such as Menu and Memory settings, will be deleted. If you need to change the ARS feature setting after using the radio, make sure to back up your registered data or make a written note, before applying the setting change.

NOTE: The ARS feature setting is NOT changed, even when executing the “ALL RESET” to restore the transceiver to the factory defaults, as described in the Operating Manual (page 24).

