


FT5DE

- 1) Turn on the transceiver
- 2) Press and hold the **[F MENU]** key, then touch the **[DISPLAY]**
- 3) Rotate the DIAL knob to select **"8 OPENING MESSAGE"** and then press the **[F MENU]** key.
- 4) Rotate the DIAL knob to select **"MESSAGE"** and then press the **[F MENU]** key.
- 5) Enter **AH082M**
 - 1) Touch the [abc] four times to select **"A"** then touch the **[→]**.
 - 2) Touch the [ghi] four times to select **"H"** then touch the **[→]**.
 - 3) Touch the [123] to display the numeric keypad input screen.
 - 4) Touch the **[0] [8] [2] [→]**.
 - 5) Touch the [ABC] to display the alphabet input screen.
 - 6) Touch the [mno] four times to select **"M"**.
- 6) Press the **[PTT]** switch, the screen that was shown when the transceiver was turned ON will reappear on the display.
- 7) Turn the transceiver OFF
- 8) Press and hold the **[GM/X]** and **[V/M]** keys when turning the transceiver ON.
- 9) Type **TYPE: B2** appears in the display.
- 10) Rotate the DIAL knob to select **C2** and press **[WRITE]**.

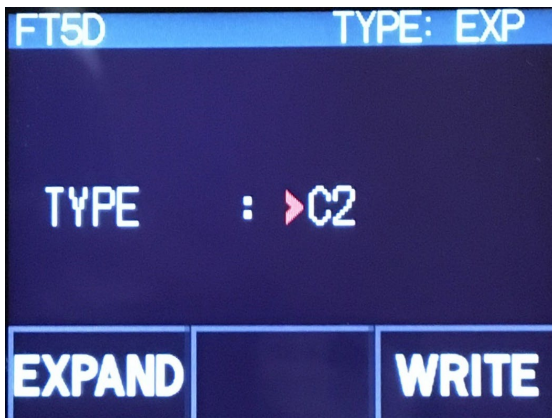

The radio will re-start automatically. Setting of the ARS feature to region **C2** is successfully completed.