

## Information for Customers Operating Transceivers in the UK

Thank you very much for purchasing this YAESU HF transceiver.


The Transceivers listed in this notice are configured at the factory with the WRC-15 5 MHz (60 m) allocation as shown below as "B2".

When your Transceiver is operated in the UK or a location where the 5 MHz allocation is the same as the UK shown below as configuration "C2", then you need to follow the instructions below for your model to change the 5 MHz (60 m) configuration, before using the transceiver for the first time.

5 MHz (60 m) band frequency range configuration "B2" Factory Default Setting	5 MHz (60 m) band frequency range configuration "C2" Selectable Setting
5.351500 MHz - 5.366500 MHz	5.250000 MHz - 5.406500 MHz




### FTDX101MP / FTDX101D

1. Turn the transceiver OFF.
2. Press and hold in the [FUNC] and [MODE] buttons while turning the transceiver ON.  
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press and release the [MODE] button, and the Green LED Indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MODE] button, and the radio will restart automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

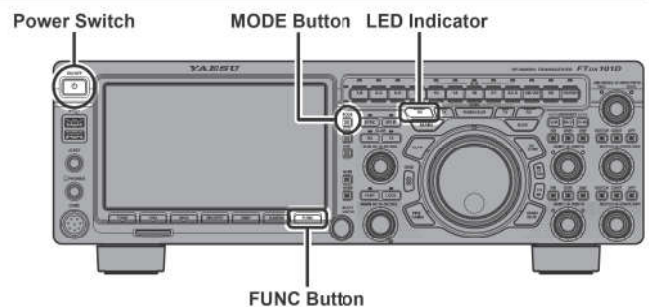


### FTDX5000 / FTDX3000 / FTDX1200

1. Turn the transceiver OFF.
2. Press and hold in the [MENU] and [C.S] buttons while turning the transceiver ON.  
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press and release the [MENU] button, and the Green LED Indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MENU] button, and the radio will restart automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

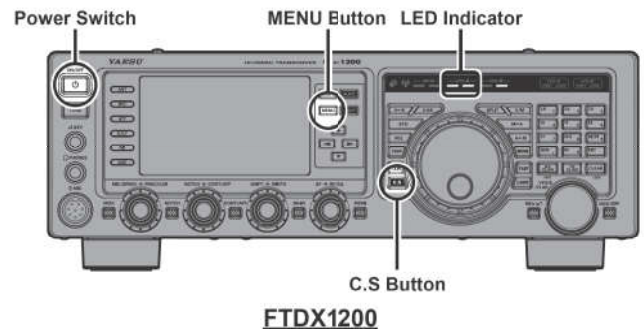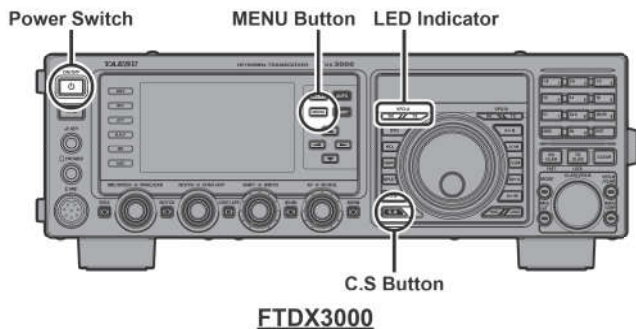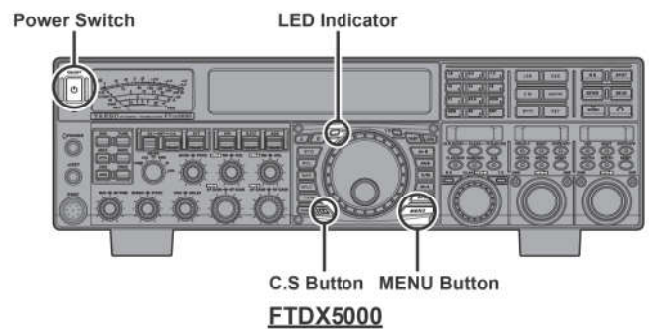


## FT-891

1. Turn the transceiver OFF.
2. Press and hold in the [F] and [QMB] buttons while turning the transceiver ON.  
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press and release the [F] button, and the Green LED Indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [F] button, and the radio will re-start automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

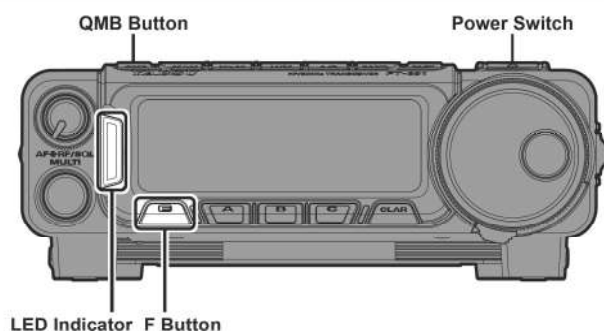


## FT-450D

1. Turn the transceiver OFF.
2. Press and hold in the [A/B] button while turning the transceiver ON.  
Setting Number "3" will appear in the display.
3. Rotate the [MAIN DIAL] knob and select the Setting Number "4".
4. Press and hold in the [MODE▲] button to store the Setting Number "4" and the radio will re-start automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

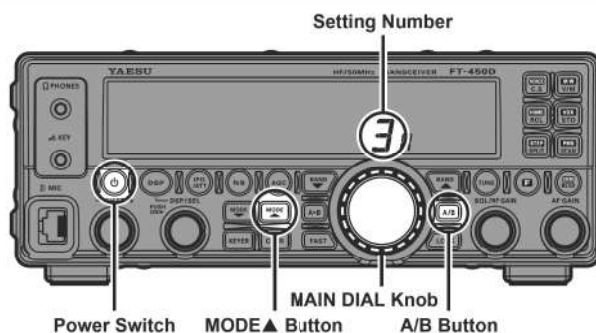

## FT-991A

1. Turn the transceiver OFF.
2. Press and hold in the [F] and [MODE] buttons while turning the transceiver ON.  
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press and release the [MODE] button, and the Green LED Indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MODE] button, and the radio will re-start automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

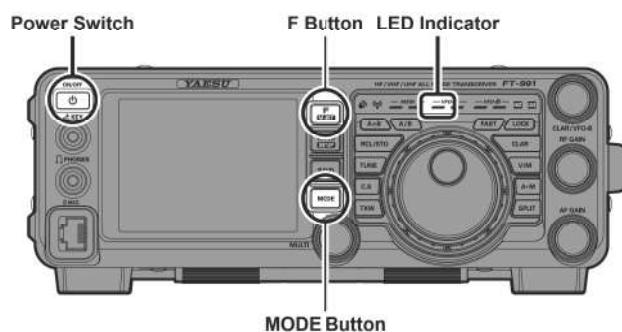

\* The FT-991A is an HF and VHF/UHF transceiver. Please note that the default ARS UHF repeater frequency coverage and shifts for this model are different from normal UK usage. Selecting the "C2" configuration as below will enable correct repeater coverage and shifts for UK operation..

ARS Configuration "B2" Factory Default Setting	ARS Configuration "C2" Selectable Setting
<b>ARS Frequency Range</b> 438.20 MHz - 439.45 MHz (- shift)	<b>ARS Frequency Range</b> 433.00 MHz - 433.40 MHz (+ shift) 434.60 MHz - 435.00 MHz (- shift)
<b>Repeater Shifts</b> 7.6 MHz	<b>Repeater Shifts</b> 1.6 MHz

### Caution:

**NOTE:** When changing the 5 MHz (60 m) band frequencies according to the procedures above, all saved data, such as Menu and Memory settings, will be deleted. If you need to change the 5 MHz (60 m) band after using the radio, make sure to back up your registered data or make a written note, before applying the setting change.

**NOTE:** The 5 MHz (60 m) band frequency range setting is NOT changed, even when executing the "Full Reset" to restore the transceiver to the factory defaults, as described in the Operating Manuals.

